


A

Apply first section:
Decide if you want the low numbers at the top or bottom of rail (the label can be read either way). CPI recommends putting the low numbers at the bottom.
Rail should be clean and dry before starting assembly.
Take care not to stretch label during installation.

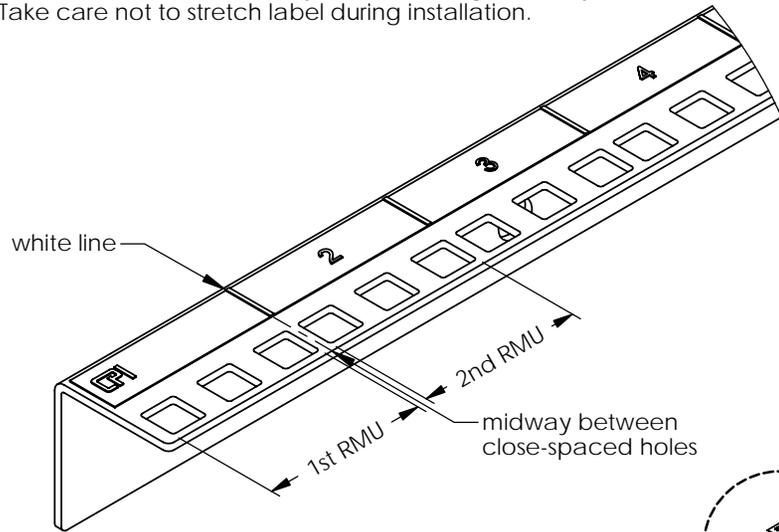


D

Trim to fit if required

C

For 9' kit only: Repeat step B with third section provided, with overlap at RMU 45.

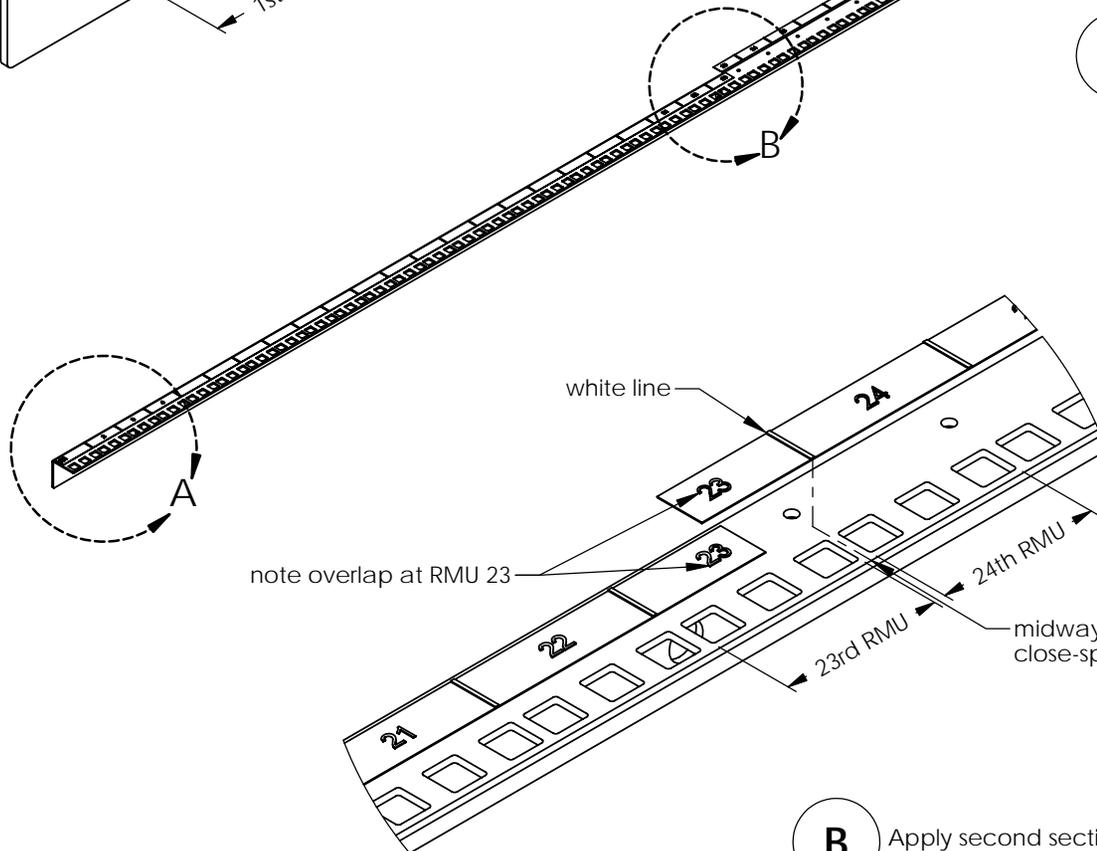

B

Apply second section

CPI CHATSWORTH PRODUCTS, INC.

RMU MARKING LABEL
INSTALLATION INSTRUCTIONS

THIS DRAWING CONTAINS INFORMATION PROPRIETARY TO CHATSWORTH PRODUCTS, INC. ANY REPRODUCTION DISCLOSURE OR USE OF THIS DRAWING IS EXPRESSLY FORBIDDEN EXCEPT AS AGREED TO IN WRITING BY CHATSWORTH PRODUCTS, INC.