


MOUNTING WITHOUT ADAPTER

- 1. DRILL A 3/16" HOLE AT DESIRED LOCATION.
- 2. MOUNT SPOOL WITH SCREW PROVIDED. SCREW IS INSTALLED FROM BACK SIDE INTO CENTER SPOOL HOLE.

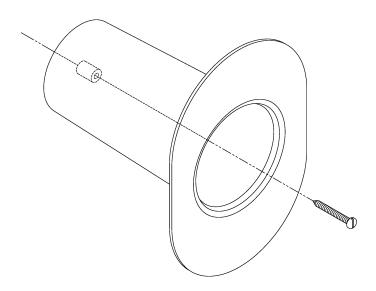

MOUNTING TO BACKBOARD

 A #6 OR #7 X 1-1/2" LONG WOOD SCREW (NOT PROVIDED) CAN BE USED THROUGH THE SPOOL CENTER HOLE.



CABLE SPOOL MOUNTED
WITHOUT ADAPTER
OR TO A BACK BOARD

THIS DRAWING CONTAINS INFORMATION PROPRIETARY TO CHATSWORTH PRODUCTS, INC. ANY REPRODUCTION DISCLOSURE OR USE OF THIS DRAWING IS EXPRESSLY FORBIDDEN EXCEPT AS AGREED TO IN WRITING BY CHATSWORTH PRODUCTS, INC. 01/24