

Installation Instructions

RUNWAY SUPPORT KIT 12" STANDOFF

Safety Information




WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Tools Required

½" Wrench


Included Hardware

- 8x 5/16 Bolt
- 8x 5/16 Nut
- 8x 5/16 Washer
- 4x Bracket Clamp

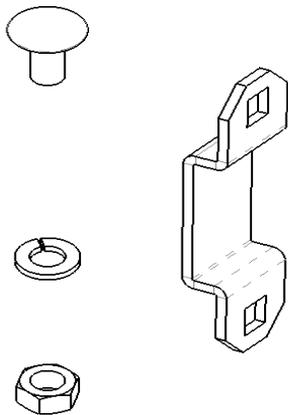

Installation

1. Install as shown below with bolt head on inside to protect wires.

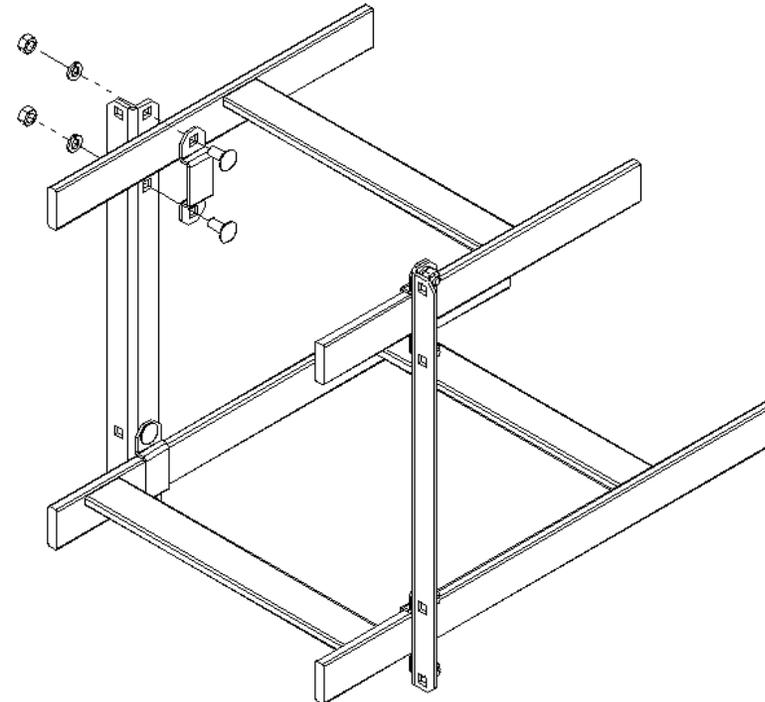

CHATSWORTH PRODUCTS, INC.

IIS-731470, 7/20/2015, Rev. 4, CPI/M Richardson
800-834-4969 (USA & Canada) • www.chatsworth.com •
techsupport@chatsworth.com
For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.