Installation Instructions

Cable Divider Bar Kit

Tools Required

#2 Phillips screwdriver

Intended Use

Cable Divider Bar Kit provides tie points for cables inside Evolution[®] Vertical Cable Managers and divides the interior of the cable manager to create multiple channels for cables.

Included Hardware

- Qty 10 ea Pan Head Taptite Screws, 10-32 x 1/2"
- Qty 4 ea Cable Divider Bars

10-32 x 1/2" Taptite Screw










In order for the Cable Divider Bar to mount to the Accessory Panel on the Single-Sided Evolution or the Moveable Mid-Section on the Double-Sided Evolution, the distance between the panels must be 18.6 inches.

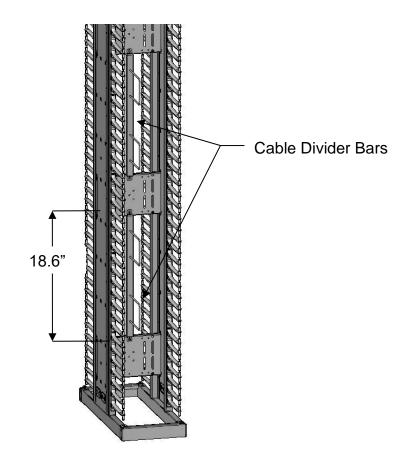



IIS-735503, 01/06/10, Rev. 2, CPI/D. Alaniz

800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.

Installation Instructions

Cable Divider Bar Kit

Assembly Sequence

NOTE: For easier installation, attach Cable Divider Bar Kit before installing optional Cable Spool Kit provided with Vertical Cable Manager.

- 1. Cable Divider Kits ship with all necessary hardware included.
- 2. Locate the included hardware and verify contents.
- The Divider Bars attach to the Fixed Accessory Panels on the back of single-sided vertical managers and the Movable Mid-Sections inside double-sided vertical cable managers.
- 4. The Divider Bars can attach to any of the mounting holes in the midsections of the vertical cable managers.
- 5. Mount a single Divider Bar using two 10-32 x $\frac{1}{2}$ " screws as shown in Figures 1 and 2.

