

Installation Instructions

EQUIPMENT GROMMET KIT

Included Hardware

Grommets, 8ea.

Assembly Sequence (Fig. 1).

1. Check orientation of grommet. Snaps must be facing the equipment rail.
2. Insert grommet into rectangular cutout of equipment rail from the front of the rail. Push on grommet until snaps engage around sheet metal rail.

Cable Penetration

1. Grommet is scored to facilitate cutting.
2. Use utility knife to cut minimum material required to route cabling (Fig. 2).

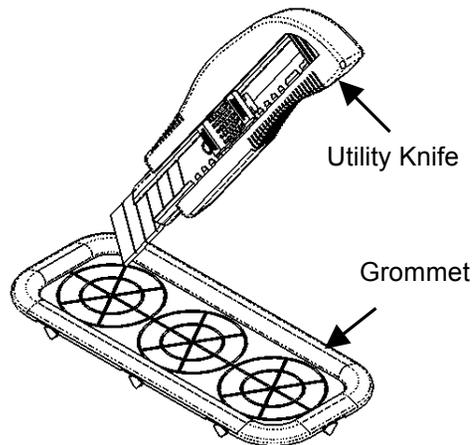


Fig. 2
Cutting the Grommet

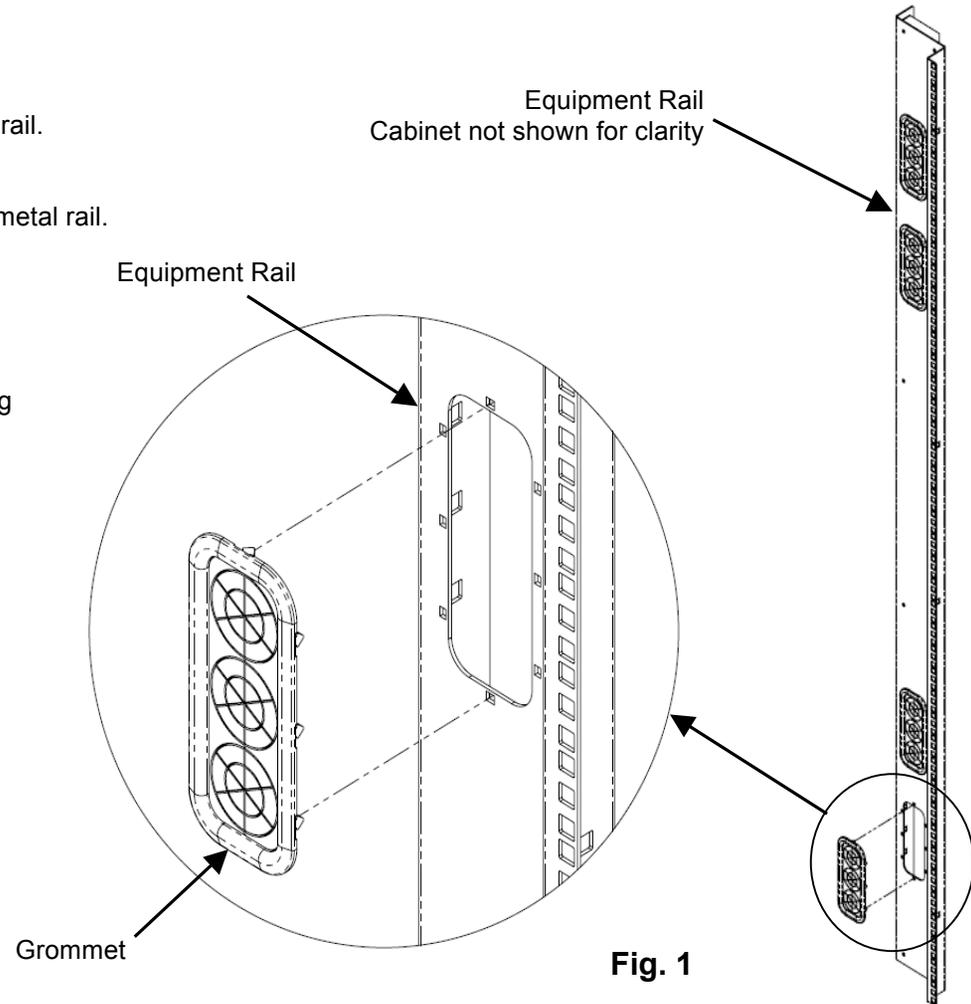


Fig. 1



IIS-739133, 02/18/13, Rev. 1, CPI/JAG
800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com
For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.